These programming instructions **MUST BE FOLLOWED IN SEQUENTIAL ORDER**

Step 1
Ensure that there is power going only to the motor you want to program.
If using a T4 select appropriate channel.
Press and hold the **Up** & **Down** buttons together and release them when the motor jogs

Step 2
Check that the down button is taking the unit out or down. If it is proceed to Step #3. If it is not Press & Hold the **My** (stop)   button and release it when the motor jogs

Altus RTS

or

Sunea RTS CMO
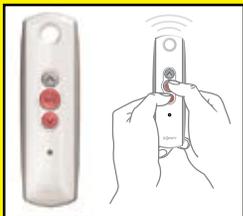
Step 3
Press & Hold the **Down & My** (stop) button and release them when the unit starts to move out or down
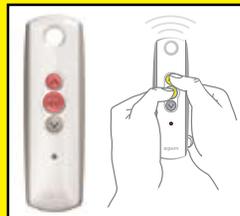
Step 3
Press & Hold **Down** button until awning moves automatically - **Stop** at outside limit Press & Hold the **Up & My** (stop) button and release them when the unit starts to move in or up
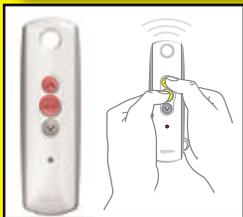
Step 4
Press & Hold the **Up & My** (stop) button and release them when the unit starts to move in or up

Step 4
Stop the unit 1/2

Adjust Limits

Send unit to current limit either _all the way_ out or in

Step 5
Press & Hold the **My** (stop) button until unit jogs (Altus RTS) or moves in (Sunea RTS CMO)
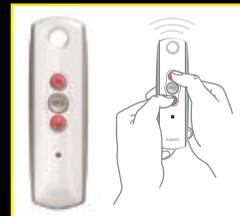
Step 1
Press & Hold **Up & Down** button together release when motor jogs

Step 6
Press & Hold the **Programming** button on back of remote, release it when motor jogs

Step 2
Move to new position and Presss & Hold **My** (stop)button, release when motor jogs